

## **VB-TVMount-01**

(i) NOTE

In roadmap, will GA soon.

#### Introduction

VB-TVMount-01 is a modular TV mount designed specifically for meeting environments, supporting flexible deployment of Yealink MeetingBar devices. Through its innovative modular design, this mount can be directly adapted to mainstream TV models, providing a stable hanging solution. With the VB-TVMount-01, the MeetingBar A50 can be installed at the bottom of the TV, or, using the included top mounting bracket, quickly reconfigured to switch to a top-mounted position, achieving the best alignment of device placement and spatial aesthetics. The bottom installation mode also supports compatibility with the Yealink MeetingBar A40. While ensuring safety, the VB-TVMount-01 provides an optimal spatial solution for video conferencing systems






## Specification


Parameter	Description
Dimension	<ul> <li>Dimension(TV Mounting Bracket with bottom Bracket): 691mm * 309mm (Height x Width)</li> <li>Dimension(TV Mounting Bracket with with Top Bracket): 670mm * 309mm (Height x Width)</li> <li>Carton Meas: 636*213*364</li> </ul>
Weight	· N.W/CTN: 2.69KG · G.W/CTN: 3.548KG

# **Package Contents**



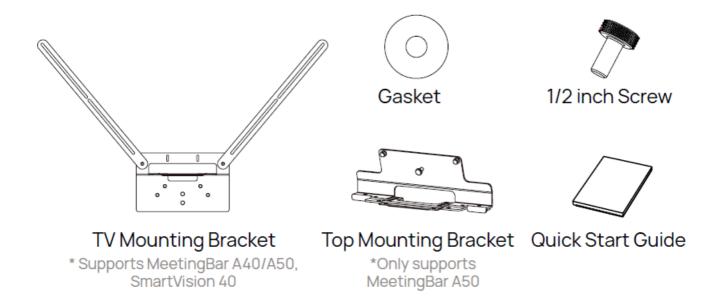

## **Adjusting the Extension Bracket (Optional)**

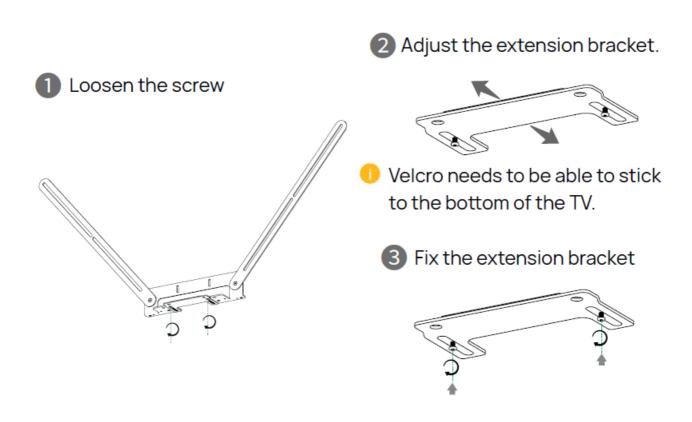

- 1. Loosen the screw.
- 2. Adjust the extension bracket.
- 3. Fix the extension bracket.




### **Assembling the VB-TVMount-01**


Before installation, adjust the extension bracket to the appropriate position. See 2 Adjusting the Extension Bracket.

#### **Bottom Mounting**

Remove the velcro

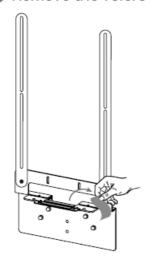


2 Stick the velcro to the bottom center of the TV.

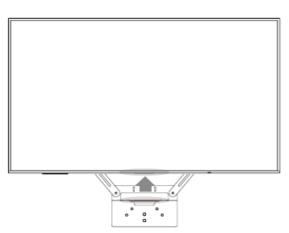

3 Fix the bracket



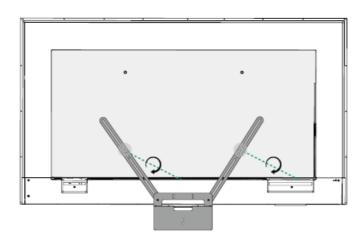


- 1. Remove the velcro.
- 2. Stick the velcro to the bottom center of the TV.
- 3. Fix the bracket.

#### (i) NOTE


Gasket can be used when the gap between the back of the TV and the bracket is relatively large.

### **Top Mounting**



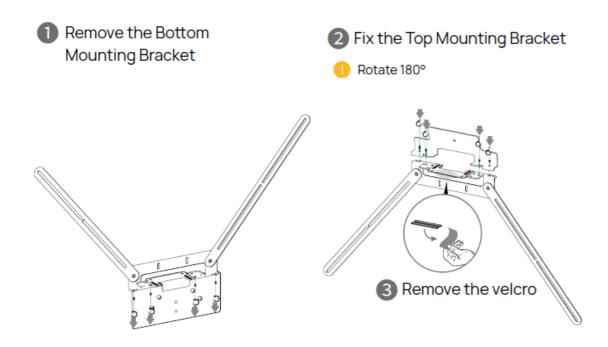

4 Stick the velcro to the bottom center of the TV.

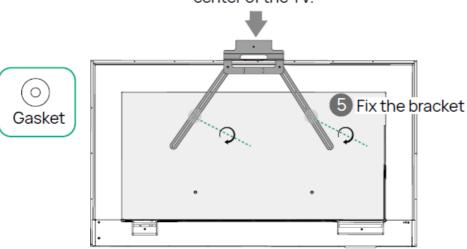

- 1. Remove the Bottom Mounting Bracket.
- 2. Fix the Top Mounting Bracket(Rotate 180°).
- 3. Remove the velcro.
- 4. Stick the velcro to the bottom center of the TV.
- 5. Fix the bracket.

#### (i) NOTE

Gasket can be used when the gap between the back of the TV and the bracket is relatively large.